



The Critical Path in Maintenance Starts and Ends With Bolting.

TOOL MODEL: TTP-.5 PRESSURE / TORQUE CONVERSION CHART

PRESSURE		TORQUE		
psi	bar	ft-lbs	kgf-m	N-m
20	1.38	1150	159	1559
25	1.72	1465	203	1987
30	2.07	1781	246	2414
35	2.41	2096	290	2842
40	2.76	2412	333	3270
45	3.1	2733	378	3705
50	3.45	3054	422	4141
55	3.79	3376	467	4577
60	4.14	3698	511	5013
65	4.48	4020	556	5451
70	4.83	4343	600	5888
75	5.17	4665	645	6325
80	5.52	4984	689	6757
85	5.86	5266	728	7139

