

TORCTOOL

TOOL MODEL: TTX-11

PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	1516	210	2056	104
1600	1623	224	2200	110
1800	1835	254	2487	124
2000	2047	283	2775	138
2200	2261	313	3065	152
2400	2475	342	3355	165
2600	2689	372	3645	179
2800	2903	402	3936	193
3000	3117	431	4226	207
3200	3333	461	4518	220
3400	3548	491	4810	234
3600	3764	521	5102	248
3800	3979	550	5395	262
4000	4195	580	5687	276
4200	4415	611	5985	290
4400	4634	641	6282	303
4600	4854	671	6580	317
4800	5074	702	6878	331
5000	5294	732	7176	345
5200	5519	763	7482	358
5400	5745	795	7788	372
5600	5971	826	8094	386
5800	6196	857	8400	400
6000	6422	888	8706	414
6200	6643	919	9005	427
6400	6864	949	9305	441
6600	7085	980	9605	455
6800	7306	1010	9904	468
7000	7527	1041	10204	482
7200	7755	1073	10513	496
7400	7983	1104	10822	510
7600	8212	1136	11132	524
7800	8440	1167	11441	538
8000	8668	1199	11750	552
8200	8908	1232	12076	565
8400	9148	1265	12401	579
8600	9388	1298	12727	593
8800	9628	1332	13052	607
9000	9869	1365	13378	620
9200	10084	1395	13670	634
9400	10299	1424	13962	648
9600	10514	1454	14253	662
9800	10730	1484	14545	676
10000	10945	1514	14837	690