

# TORCTOOL

TOOL MODEL: TTX-5

## PRESSURE/TORQUE CONVERSION CHART

### Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	913	126	1237	104
1600	975	135	1322	110
1800	1100	152	1491	124
2000	1225	169	1661	138
2200	1352	187	1832	152
2400	1478	204	2003	165
2600	1604	222	2174	179
2800	1730	239	2346	193
3000	1857	257	2517	207
3200	1984	274	2689	220
3400	2111	292	2861	234
3600	2238	309	3034	248
3800	2365	327	3206	262
4000	2492	345	3378	276
4200	2620	362	3551	290
4400	2747	380	3724	303
4600	2875	398	3897	317
4800	3002	415	4070	331
5000	3130	433	4243	345
5200	3258	451	4417	358
5400	3386	468	4590	372
5600	3514	486	4764	386
5800	3642	504	4938	400
6000	3771	521	5111	414
6200	3900	539	5286	427
6400	4028	557	5461	441
6600	4157	575	5636	455
6800	4286	593	5811	468
7000	4415	611	5985	482
7200	4544	628	6160	496
7400	4674	646	6336	510
7600	4803	664	6511	524
7800	4932	682	6686	538
8000	5061	700	6861	552
8200	5191	718	7036	565
8400	5320	736	7212	579
8600	5450	754	7387	593
8800	5579	772	7563	607
9000	5709	790	7739	620
9200	5836	807	7911	634
9400	5963	825	8084	648
9600	6090	842	8256	662
9800	6218	860	8429	676
10000	6345	878	8601	690