

TORCTOOL

TOOL MODEL: TTZ-8

PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	1202	166	1630	104
1600	1284	178	1741	110
1800	1448	200	1963	124
2000	1612	223	2185	138
2200	1771	245	2401	152
2400	1931	267	2618	165
2600	2091	289	2835	179
2800	2251	311	3051	193
3000	2411	333	3268	207
3200	2575	356	3491	220
3400	2740	379	3714	234
3600	2905	402	3937	248
3800	3069	424	4161	262
4000	3234	447	4384	276
4200	3404	471	4615	290
4400	3575	494	4846	303
4600	3745	518	5077	317
4800	3915	541	5307	331
5000	4086	565	5538	345
5200	4253	588	5766	358
5400	4421	611	5994	372
5600	4589	635	6221	386
5800	4757	658	6449	400
6000	4925	681	6676	414
6200	5094	704	6905	427
6400	5263	728	7134	441
6600	5432	751	7363	455
6800	5601	775	7592	468
7000	5769	798	7821	482
7200	5939	821	8052	496
7400	6109	845	8282	510
7600	6279	868	8512	524
7800	6449	892	8743	538
8000	6619	915	8973	552
8200	6785	938	9198	565
8400	6951	961	9423	579
8600	7117	984	9648	593
8800	7283	1007	9873	607
9000	7449	1030	10098	620
9200	7621	1054	10331	634
9400	7793	1078	10564	648
9600	7965	1102	10797	662
9800	8137	1125	11030	676
10000	8308	1149	11263	690